

Japon Seiko VD31




MOMENTUS
BUILT FOR PERFECT MOMENTS

Kullanım Kılavuzu


User Guide

DISPLAY AND CROWN / BUTTON OPERATION

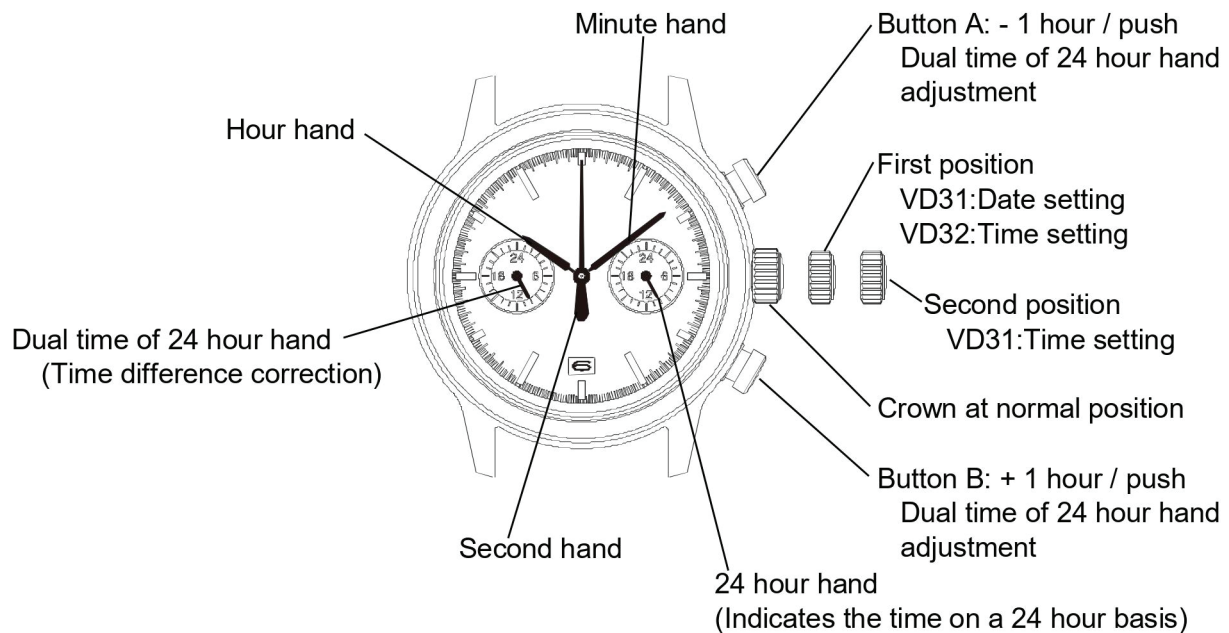


ADJUSTING THE DUAL TIME OF 24 HOUR HAND POSITION

Before setting the time, check if the dual time of 24 hour hand is in the "0" (24 o'clock) position. If the dual time of 24 hour hand is not in the "0" position, reset them following the procedure below. The battery setting and after battery change, please execute the "0" position adjustment.

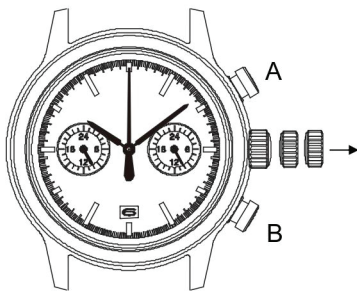


1. Pull out the crown.
VD31: second click
VD32: first click

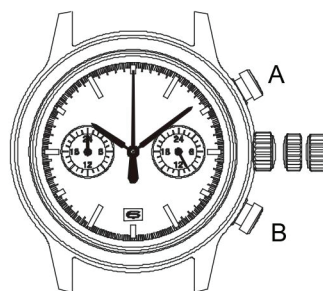

2. Keep the buttons A & B pressed at the same time more than 2 seconds, and then release the buttons.

*Dual time of 24 hour hand moves. Returned to where it was. However, confirmation is difficult because the amount of movement is small.

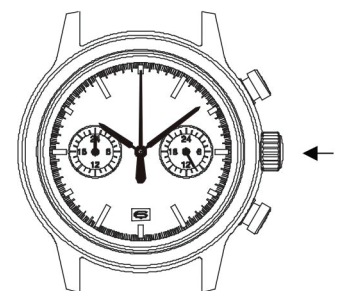

3. Press button A or B to reset the dual time of 24 hour hand to "0" position.

*By pressing button A the hand move counter clockwise.
*By pressing button B the hand move clockwise.
*Press and hold the button, possible to fast-forward modification.

4. Push the crown back to the normal position.

TIME SETTING



1. Pull out the crown when the second hand is at the 12 o'clock position.
[Crown position]
VD31: second click
VD32: first click
2. Turn the crown to set the hour and minute hands.
(Check that 24 hour hand is set correctly)
3. Push the crown back normal position in accordance with a time signal.

Note


- *The 24 hour hand moves correspondingly with the hour hand.
- *The moment of the date changes is midnight. when setting the hour hand, make sure that AM/PM is correctly set by using the 24 hour hand as an AM/PM indicator.

■ Using the time difference correction

When moving to a country or area which is in a different timezone, the current time in the local time can be corrected.

1. Crown at the normal position.
2. To adjust the time by pressing the button A or B.
 - *By pressing button A the hands move counter clockwise. - 1 hour / push
 - *By pressing button B the hands move clockwise. + 1 hour / push


TIME SETTING (DUAL TIME OF 24 HOUR HAND)

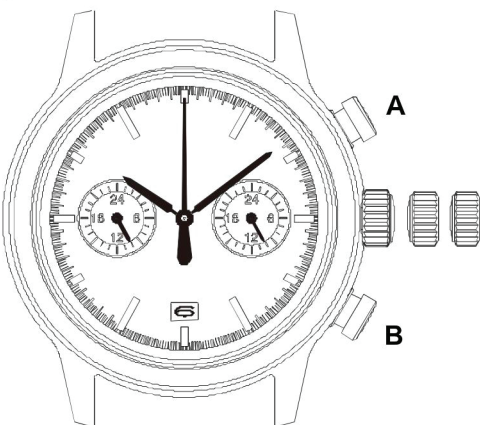

1. Pull out the crown when the second hand is at the 12 o'clock position.
[Crown position]
VD31: second click
VD32: first click
2. To adjust the time by pressing the buttons A or B.
By pressing button A the hands move counter clockwise.
By pressing button B the hands move clockwise.
*Press and hold the button, possible to fast-forward modification.
3. Push the crown back in to the normal position.

DATE SETTING (Cal.VD31 only)

*Before setting the date, be sure to set the time.

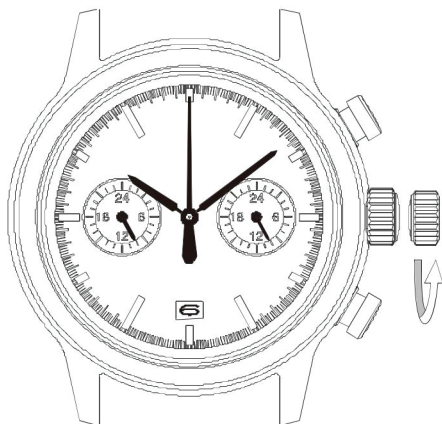

- 1.Pull out the crown to the first click.
- 2.Turn the crown to clockwise until the next date appears.
- 3.Push the crown back in to the normal position.

Note

*Do not set the date during any time between 9:00 P.M. and 1:00 A.M.
Otherwise, the date may not change properly. If it is necessary to set the date during that time period,
First change the time to any time outside it, set the date and then reset the correct time.